



Table with 4 columns: NO, Name, NO, Name. Lists various functions like LED display, color selection, rhythm, and teaching modes.

6.编程: 按“编程”键,数码屏显示“ON”,开启编程模式... 7.音量: 按“音量+/-”键,可增大减小声音... 8.脚踏: 按“脚踏”键,数码屏显示“ON1”,则开启脚踏功能...

附表1.示范曲列表: Table with 4 columns: NO, Name, NO, Name. Lists demo songs like 致爱芭丝, 克罗地亚狂想曲, etc.

附表2.音色列表: Table with 4 columns: NO, Name, NO, Name. Lists instrument sounds like 钢琴, 大钢琴, 电钢琴, etc.

附表3.节奏列表: Table with 4 columns: NO, Name, NO, Name. Lists various rhythms like 贝里茨摇摆, 贝里茨_2, etc.

附表4.音色列表: Table with 4 columns: NO, Name, NO, Name. Lists instrument sounds like 贝里茨摇摆, 贝里茨_2, etc.

四.手卷钢琴的日常清理与维护: 1.每次使用完手卷钢琴,可以用干净的毛巾打湿... 2.手卷钢琴使用后要正确的卷起卷好...

保修卡: 客户信息, 经销商信息, 购买日期, 年月日. Includes a section for return and a QR code.